


Congratulations in choosing our **Patented System KeyPack**[®] to transport at **controlled temperature** your goods. Follows a brief guide to best use.

COMPONENTS

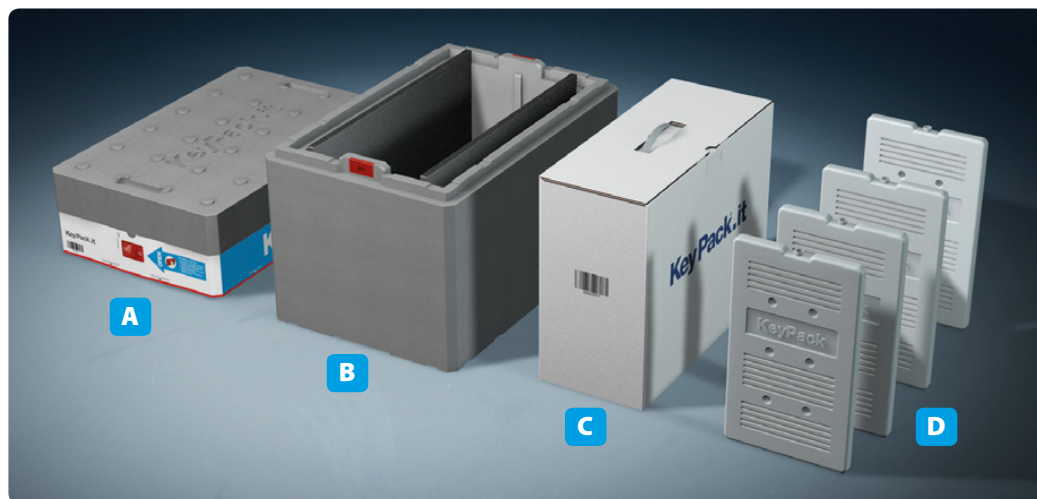

- A.** n.1 EPS lid.
- B.** n.1 EPS box.
- C.** n.1 drugs cardboard box.
- D.** n.4 gel packs KP15.

GEL PACKS FREEZING



Insert gel packs in freezer at a temperature of **-20°C/-25°C** horizontally for **48 hours**.


-20°C / -25°C for 48h

PLEASE NOTICE: Utilise only **specified** gel packs.
For further info or assistance on Freezing contact our **Support Service** at:
support@keypack.it


■ THERMAL BOX 64565 ASSEMBLY




To achieve an **ideal KeyPack® EPS container assembly** box and lid must be at utilization time, at a temperature **non exceeding 10°C**.

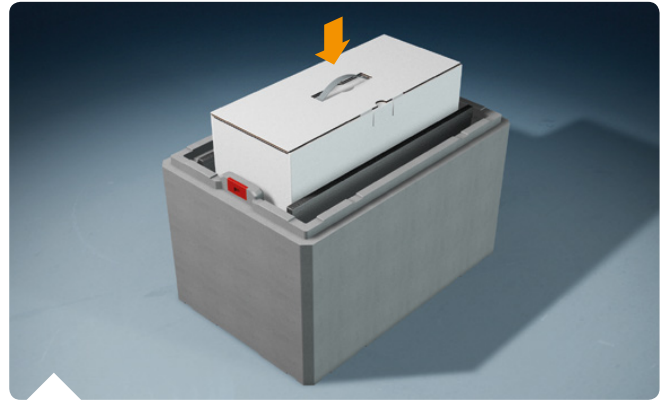

1. Once the drug cardboard box is filled, it can be introduced in the EPS box.

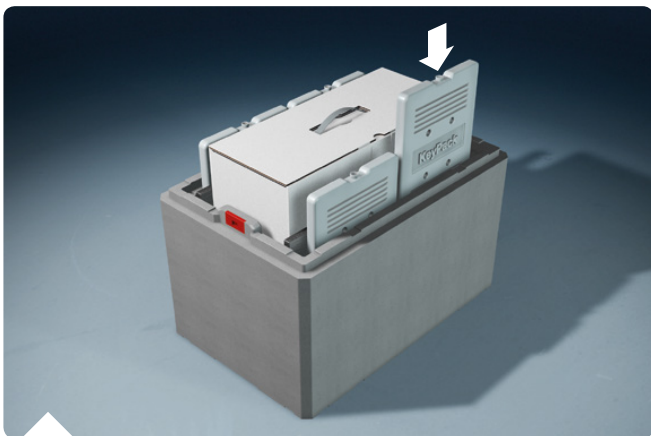

2. Insert gel packs (frozen and stabilized) in their proper lodgings.

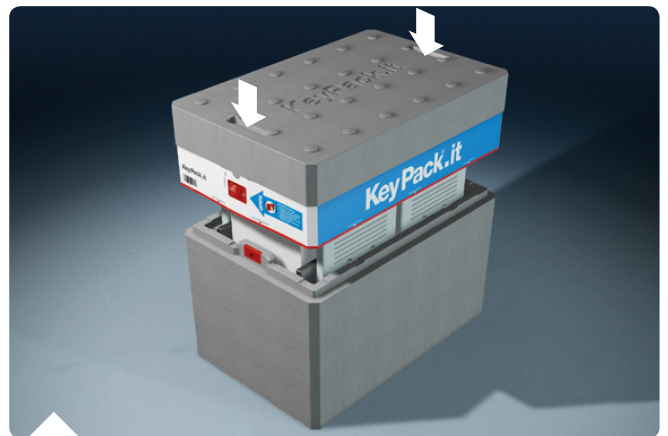

3. Put lid on EPS box and push down.



4. A double click will confirm the safety systems blockage.

At this point the thermal container is operating. It will not be possible to open it unless breaking both guarantee seals, as indicated by two blue arrows.

NOTICE

The controlled internal temperature will be determined and subject to the **correct gel packs insertion**, referring both to the **correct quantity** and proper **freezing** and **stabilization** (see the previous page). Please comply to the chart below.


GEL PACKS CHART

COD. 64565

4 gel packs KP 15

KeyPack[®] System innovation follows through into logistic.

■ **THE COMPLETE SYSTEM** a short guideline

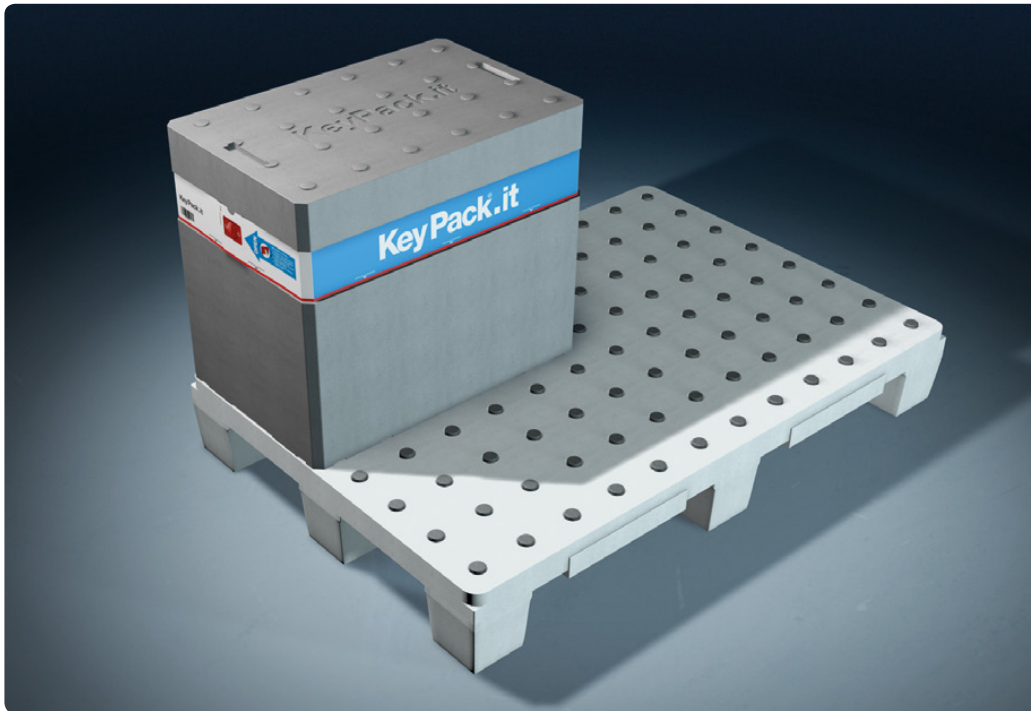

■ Assembled container positioning on EPS pallet.



■ Pallet ready for delivery.

Discover all exclusive advantages of the whole **System** on our website www.keypack.it